nlays with tools - Driver system

In resistant oil-proof foam,

In 2 colours; missing tools are noticed immediately


Suitable for drawers of trolley:

SPEEDY, RUNNER, FASTBOY, PILOT, DRIVER, and TRUCK (see from page 877) These inlays have standard modular dimensions:

- 390x170 mm, on 1/3 of the drawer;
- 390x390 mm, on 2/3 of the drawer;
- 390x560 mm, on 3/3 of the drawer








395 x 375 mm 395 x 565 mm

Set of second cut files 1/3

Consisting of:

5 files with shape





2/3

3/3



Set of 5 tools in 2/3 inlay

Consisting of:

- 1 compound leverage snip for sheet metal
- 1 electrician's scissor
- 1 knife with bi-metal blade
- 1 hacksaw frame with bi-metal blade
- 1 measuring tape 3 m

Code N 6870 1500 N 687



Each €




Set of «T» wrenches with swivel end sockets in 3/3 inlay

Consisting of:

9 wrenches 7 - 8 - 9 - 10 - 12 - 13 - 14 - 17 - 19 mm

© Wieliches 7 - 8 - 9 - 10 - 12 - 13 - 14 - 17 - 19 mini Code N 6870 1600 N 6870/16 Each €

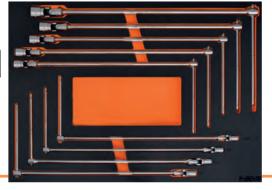

Empty inlays - Driver system

In resistant oil-proof foam

With **2 colours** for quick identification of the outline, and to put tools away quickly Suitable for insertion in drawers on trolleys:

SPEEDY, RUNNER, FASTBOY, PILOT, DRIVER and TRUCK (see from page 877)

Type with 3 sectors, dimensions 110x120 mm

Suitable for insertion in RUNNER trolley drawers, with 2 1/3 slots or 1 2/3 slot

Dimensions 390x150 mm

 Code N 6870 4900
 N 6870/49
 Each €



Pre cubed type

For creating compartments with customised dimensions Ideal for housing and protecting delicate instruments and objects

Suitable for occupying 3/3 in drawer trolleys

Dimensions 395x565 mm

Code N 6873 5000 N 6873/5

873/5 Each €



Whole type

For creating compartments with customised dimensions

Suitable for occupying 3/3 in drawer trolleys

Dimensions 395x565 mm

 Code N 6873 7000
 N 6873/7
 Each €

